



Oxford Smart Desk

Instruction Manual


Height Adjustment

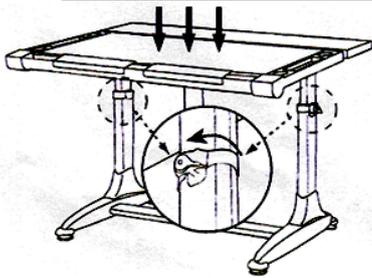

1. Release the safety lock on both sides by turning inwards to 'OPEN' position.

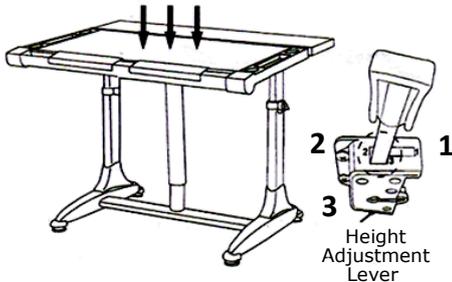


2. Shift the adjustment lever from position 1 to 3. (Free Gear)

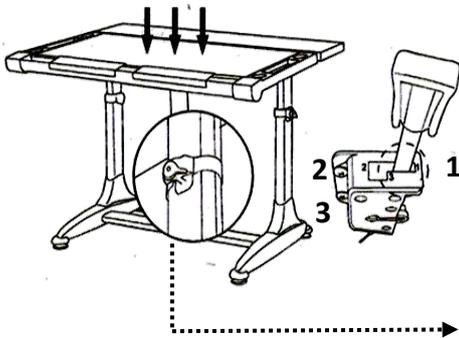


3. Push the desktop down to its lowest position and release the adjustment lever back to position 1.

Adjust to desired height by shifting the adjustment lever at position 1. Once the height is fixed, lock the position by turning the safety lock outwards to 'CLOSE' position.

Tilting Adjustment

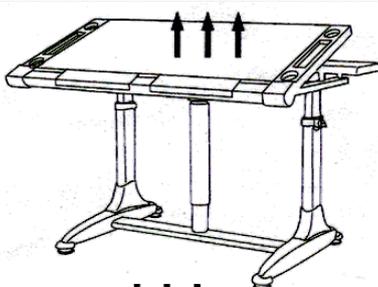

4. Lift the front desktop to desired angle.

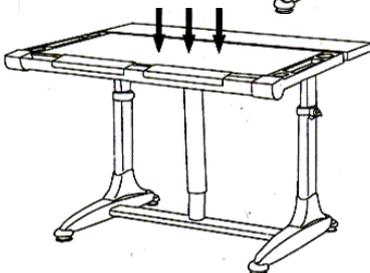


5. To lower the desktop, apply downward pressure on the centre of the desktop.

Guide to Adjusting the Desk Height

- Take the child's navel (belly button) as the guideline when adjusting the height of the desk. It should be parallel to the navel point.
- Ensure that the arm is at least 90° parallel to the desk.
- If the desk is tilted, adjust the height slightly higher.

IMPORTANT:

1. When adjusting the height, please remove all the items from the desk.
2. When moving the desk, please ensure that the safety lock on both desk legs is in 'CLOSE' (Lock) position.
3. For Safety reasons, please do not stand or sit on the desk.
4. DO NOT place Ice-water on the desk to avoid water seepage.

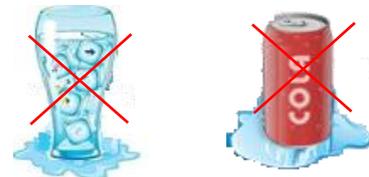

Maintenance Care

The desk has a safety Anti-Rebound Locking System.

If you have difficulties adjusting the desk height, please check the following:

1. Ensure both safety locks are in 'OPEN' (Unlock) position.
2. Ensure the adjustment lever is in position 3 (free gear).
3. Exert downward pressure until you hear a 'Click' sound. The desk will gently rebound.

Cleaning Care

*Clean with a damp cloth using mild, non-abrasive cleaners.

*Use of abrasive cleaners, acid-based cleaners, scouring pads, steel wool, sandpaper, etc., will permanently damage and stain the laminate.

Disclaimer: Kinder Fun will not be held responsible for any damages occurred during the self maintenance / cleaning process

For assistance, please call our Customer Service Hotline: **6775 6388**

or Visit any of our Kinder Fun showrooms