



Harvard Desk

Instruction Manual

Height Adjustment

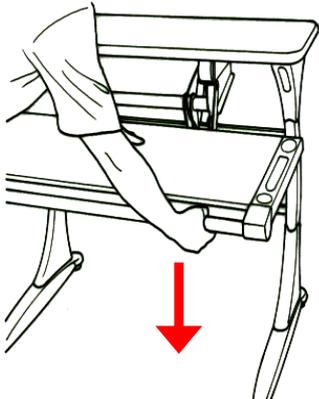


1. To adjust the front desk **LOWER**: Press & hold the height adjustment lever with one hand, while the other hand apply pressure on the centre of the desk top and gently lower to the desired height.

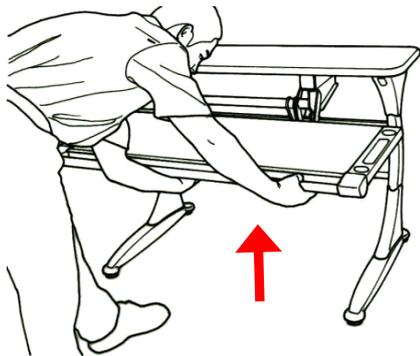


2. To adjust the front desk **HIGHER**: Press & hold the height adjustment lever with one hand, while the other hand support the desk platform from underneath and gently lift it up to the desired height.

Tilting Adjustment

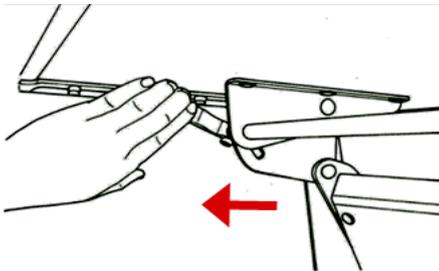

3. Before adjustment, **RELEASE** the tilting lever underneath the front desk by 'turning outwards'.

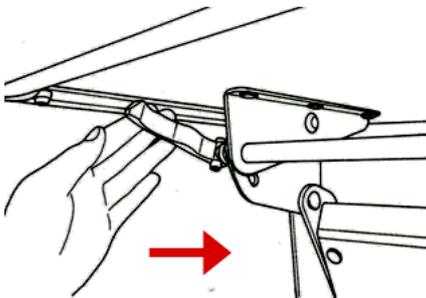


4. Adjust the front desk to your desired angle. **LOCK** the position by 'turning inwards' the tilting lever back to its original position.

Guide to Adjusting the Desk Height

- Take the child's navel (belly button) as the guideline when adjusting the height of the desk. It should be parallel to the navel point.
- Ensure that the arm is at least 90° parallel to the desk.
- If the desk is tilted, adjust the height slightly higher.

IMPORTANT:


1. When adjusting the height, please remove all the items from the desk.
2. When moving the desk, please ensure that the tilting lever is in 'LOCK' position.
3. For Safety reasons, please do not stand or sit on the desk.
4. **DO NOT** place Ice-water on the desk to avoid water seepage.

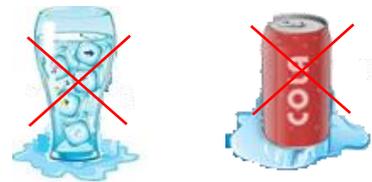

Maintenance Care

If the tilting lever is loose, the desk will not be able to lock fully.

In this case, please use the 'open wrench' to tighten the screw located at the opposite end of the tilting lever.

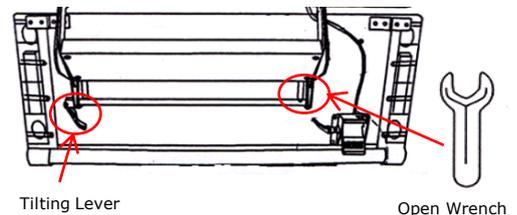

Cleaning Guideline

- *Clean with a damp cloth using mild, non-abrasive cleaners.
- *Use of abrasive cleaners, acid-based cleaners, scouring pads, steel wool, sandpaper, etc., will permanently damage and stain the laminate.

Disclaimer: Kinder Fun will not be held responsible for any damages occurred during the self maintenance / cleaning process

For assistance, please call our Customer Service Hotline: **6775 6388**

or Visit any of our Kinder Fun showrooms